


Outdoors

Solar Decoration

LED solar lantern

Item no. 1557940

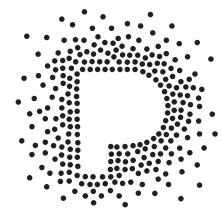

Polarlite®



Operating Instructions

Intended use

The product is designed for use as an outdoor light (IP44). The light turns on automatically in the dark. Power is provided via a rechargeable battery, which charges during the day via the built-in solar panel.

For safety and approval purposes, you must not rebuild and/or modify this product. Using the product for purposes other than those described above may damage the product. In addition, improper use can cause hazards such as a short circuit or fire. Read the instructions carefully and store them in a safe place. Make this product available to third parties only together with its operating instructions.

This product complies with statutory national and European regulations. All company and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- Solar decoration with inserted rechargeable battery
- Operating Instructions

Safety instructions

Read the operating instructions and safety information carefully. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.



a) Persons / Product

- This product is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly, as it may become dangerous playing material for children.
- Check the product for damage before use. If there are any signs of damage, discontinue use immediately.
- Protect the product from extreme temperatures, strong jolts, flammable gases, vapours and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, stop using it and prevent unauthorized use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stress.
- Always handle the product carefully. Jolts, impacts or a fall even from a low height may damage the product.
- The LEDs become warm during use. Keep the product away from flammable materials.
- The product generates heat. Never cover the product when it is in use.
- Warning, LED light: Do not look directly at the LED light! Do not look into the beam directly or with optical instruments!
- This product is designed for outdoor use.
- Handle the glass lantern carefully to avoid breaking the glass and causing an injury.


b) Rechargeable battery

- Ensure that the rechargeable battery is inserted in the correct polarity.
- To prevent battery leakage, remove the battery when you do not plan to use the product for an extended period. Leaking or damaged rechargeable batteries may cause acid burns when they come into contact with skin. Always use suitable protective gloves when handling damaged rechargeable batteries.
- Keep batteries out of the reach of children. Do not leave rechargeable batteries lying around, as they constitute a choking hazard for children and pets.
- Rechargeable batteries must not be dismantled, short-circuited or thrown into fire. This may cause a fire or explosion!
- Only use a rechargeable battery that conforms to the size and type specifications in the "Technical data" section.
- Only insert a rechargeable battery into the product. Never use disposable, non-rechargeable batteries, as this may cause a fire or explosion!

c) Miscellaneous

- Maintenance, modifications and repairs must be done by a technician or an authorized repair centre.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

Product overview

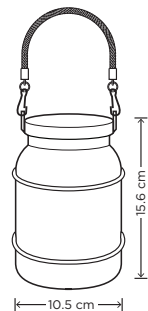

Operation

The product must not be used or mounted in or under water.

Do not use the product when it is still in the packaging.

Do not cover the product or hang any objects on the product.



The LEDs are not dimmable and cannot be replaced.

1. Remove the product from the packaging.
2. Unscrew the lid in an anticlockwise direction.
3. Pull the insulating strips out of the battery compartment on the back of the lid.
4. Turn the lid clockwise to secure it back in place.
5. Place the product on a horizontal surface such as a garden table or windowsill.

Place the lamp in a sheltered location with good access to sunlight so that the solar cell can charge the battery during the day. The solar cell should not be covered or placed in the shade (e.g. from trees or buildings).

The battery will last for approximately 8 hours after a full charge.

Important

- The power of the solar panel varies according to the time of year and depends on the duration and strength of the sunlight. Long periods without sufficient sunlight (especially in winter) may lead to a shorter battery life (the rechargeable battery stores less energy during the day than it consumes at night). This may damage the battery as a result of it becoming completely discharged. To avoid damaging the battery, turn the lamp off during extended periods without sufficient sunlight.
- Keep the solar panel clean. Dust and dirt reduce the efficiency of the solar panel, resulting in a lower charging current.
- During poor weather, you can remove the battery and charge it with a suitable battery charger. Always follow the instructions in this manual when removing/replacing the battery.

Replacing the battery

- Replace the battery when you notice a significant drop in the battery life despite sufficient charging.
- Unscrew the lid in an anticlockwise direction.
- Rotate the battery compartment cover on the back of the lid as far as it will go.
- The battery compartment cover and the lid are connected with cables. To avoid damaging the cables, exercise caution when removing the battery compartment cover.
- Insert a new battery of the correct size and type (see "Technical Data") into the battery compartment. Ensure that the battery is inserted in the correct polarity ("+" = positive; "-" = negative).
- Place the light chain inside the lantern.
- Reassemble the lantern in the reverse order.

Care and cleaning

- Before cleaning the product, turn off the lamp and let it cool down sufficiently.
- Use a clean, dry, lint-free cloth to clean the product. To remove stubborn dirt, moisten the cloth slightly with lukewarm water.
- Do not press too hard on the solar panel, as this may damage the interior components.
- Let the product dry out completely before using it again.

Technical data

Protection rating	IP44
Power supply	1 x 1.2 V, 300 mAh NiMH rechargeable battery (AAA)
Power consumption	0.08 W
Number of lights	15
Lamp colour	Warm white
Operating conditions	-20 to +40 °C
Storage conditions	-20 to +40 °C
Dimensions (H x Ø)	15.6 x 10.5 cm
Weight	500 g

Disposal

a) Product



Electronic devices are recyclable waste and must not be placed in household waste. Always dispose of the product according to the relevant statutory regulations.



Remove the rechargeable battery and dispose of it separately from the product.

b) Rechargeable batteries



As the end user, you are required by law to return all used rechargeable batteries. They must not be placed in household waste.

Rechargeable batteries that contain hazardous substances are labelled with this symbol to indicate that disposal in household waste is forbidden. The abbreviations for heavy metals in batteries are: Cd = Cadmium, Hg = Mercury, Pb = Lead (indicated on the battery, e.g. below the waste icon on the left).

Used rechargeable batteries can be returned to local collection points, our stores or battery retailers.

You thus fulfil your statutory obligations and contribute to the protection of the environment.

These operating instructions are published by CEI Conrad Electronic International (HK) Limited, 18th Floor, Tower 2, Nina Tower, No. 8 Yeung Uk Road, Tsuen Wan, New Territories, Hong Kong. All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming, or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited. These operating instructions reflect the current technical specifications at the time of printing.

© Copyright 2017 by CEI Conrad Electronic International (HK) Limited