

Technical Specifications

Power supply	9 ... 28VDC
Power consumption	typ. 0.19W
Interface	RS232: for integration of RS232 devices max. 15m wire length adjustable baud rate & parity Loxone Link: connection with Miniserver
Power loss at max. load	0.60W
Ambient temperature	-40 ... 70°C / -40 ... 158°F
Humidity	max. 95% r. H. (non condensing)
Safety rating	IP20
Dimensions	35.5x88x57mm / 1.4x3.46x2.24" (LxWxH)
Maintenance & Cleaning	This device is free of maintenance and may only be cleaned with a dry cloth.

RS232 interface

Wire cross-section	0. ... ⁷ .5mm ² / AWG2 ... ⁹⁷
Stripping length	mm / 0. "
Temperature resistance	-40 ... 70 °C / -40 ... 158°F

LOXONE

**Loxone
Electronics GmbH**
Smart Home 1
4154 Kollerschlag
Austria

Loxone UK
The Forum
Station Road
Theale, RG7 4RA
United Kingdom



For additional information,
declaration of conformity, visit
www.loxone.com/datasheets

V151122



LOXONE

RS232 Extension

Part No: 100013

About the product

The Loxone RS232 Extension is a device for automatic control and management of home automation and similar non safety critical applications.

Installation & electrical connection

The installation of the devices has to be mounted on a DIN rail in an electrical distribution housing (Standard distribution) and may only be performed by qualified personnel.

Protection against electrical contact and fire protection must be provided in the final installation by the use of a standards compliant/approved housing.

To turn the unit on/off during installation and in case of failure, a separator (disconnecting device) must be present. These must be easily accessible and visible. If the unit is used in a non conform manner as specified by the manufacturer the product included safeguards will be impaired.

Power Supply and Link Connection

Wire cross-section	0.25 ... 0.8mm ² / AWG23 ... 18
Stripping length	5mm / 0.2"
Temperature resistance	-40 ... 105°C / -40 ... 221°F

This folder is a part of the product!



For additional information, declaration of conformity, visit www.loxone.com/help/rs232

